

VHS to VHS dubbing (copying)

There are six components to the system on this cart. Please ensure that all 6 items are present when you receive the cart, and when you return the cart.

1. Phillips TV
2. Mitsubishi VCR marked "A"
3. Mitsubishi VCR marked "B"
4. Mitsubishi remote marked "A"
5. Mitsubishi remote marked "B"
6. Mitsubishi VCR Owner's Guide

Do not use remotes for any copying procedure! Remotes are only needed if you must reprogram the VCRs. If reprogramming is necessary, ask staff for assistance.

COPYING

Put original tape in VCR A (source / original.)

Put blank tape in VCR B (destination / copy.)

Press RECORD on the front panel of VCR B, then wait 1 second.

Press PLAY on the front panel of VCR A.

It records in real-time, so a 30 minute video will take 30 minutes to record.

NOTE: Some VHS tapes have copy-protection features and cannot be copied with this unit.

NOTICE: The copyright law of the United States (Title 17 U.S. Code) governs the making of photocopies or other reproductions of copyrighted material. The person using this equipment is liable for any infringement.

The TV and VCRs are already set up, but if you need to re-program them:

Unplug the power cord for one VCR and use the appropriately labeled remote to set the other one (see below.)

Then unplug that the power cord for that VCR, plug the other one in, and use its remote to set it.

If you leave both VCRs plugged in, the two identical remotes and two identical VCRs get confused, even if you turn the power off...

See Mitsubishi HS-U746 manual page 20:

Press MENU on remote.

Press ADJUST button to select S-VHS record. Select OFF.

Press ADJUST button to select S-ET record. Select OFF.

Press ADJUST button to select Rear S-input. Select OFF.

See Mitsubishi HS-U746 manual page 30:

Press INPUT on remote.

It will scroll thru several choices.

Set it to "External 1" or "L1."

Phillips TV channel should be on AUX.

